












Consultez votre plan d'implantation.







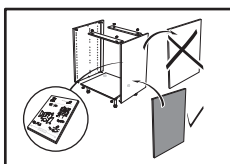


Repérez l'emplacement des côtés décor.





Repérez les pages concernant le meuble à monter.

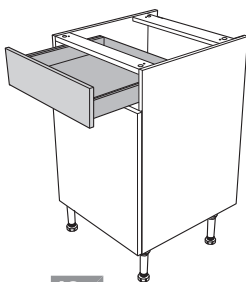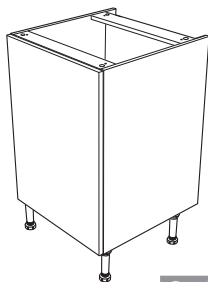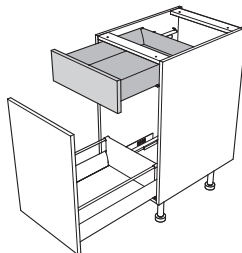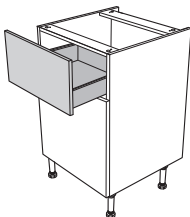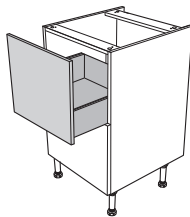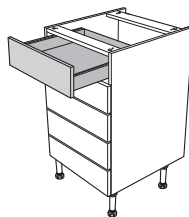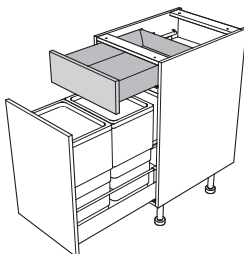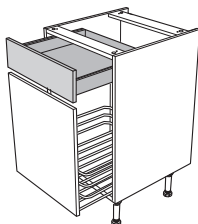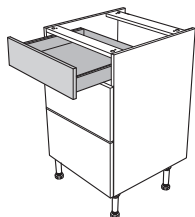


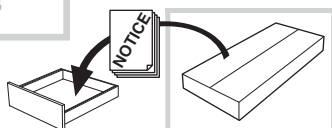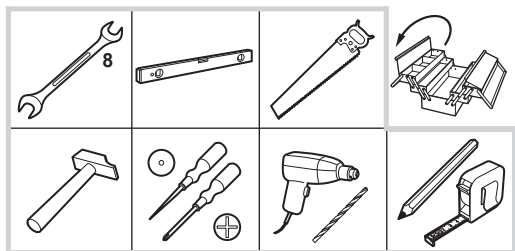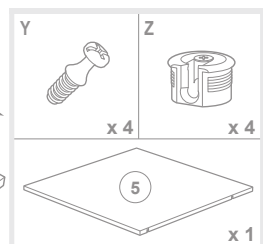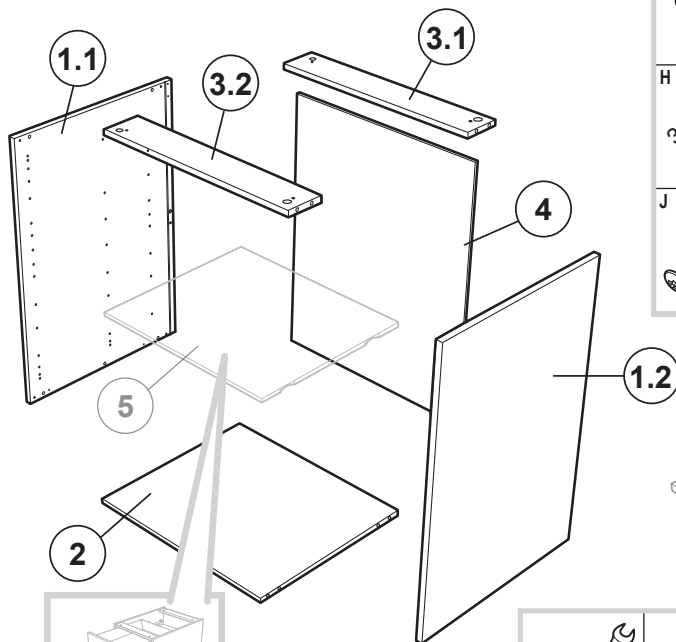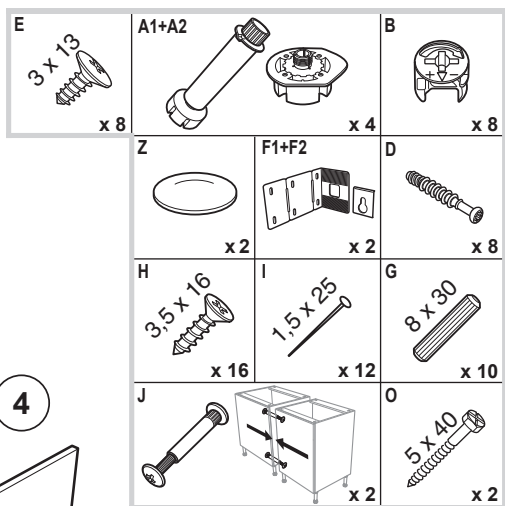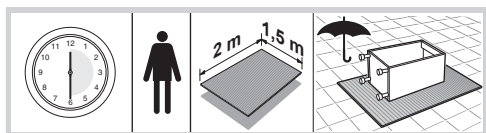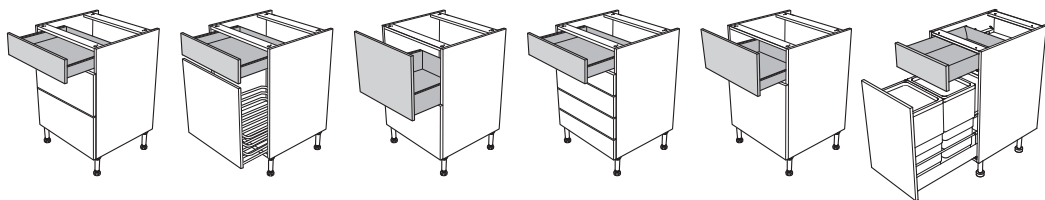

1

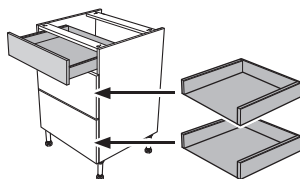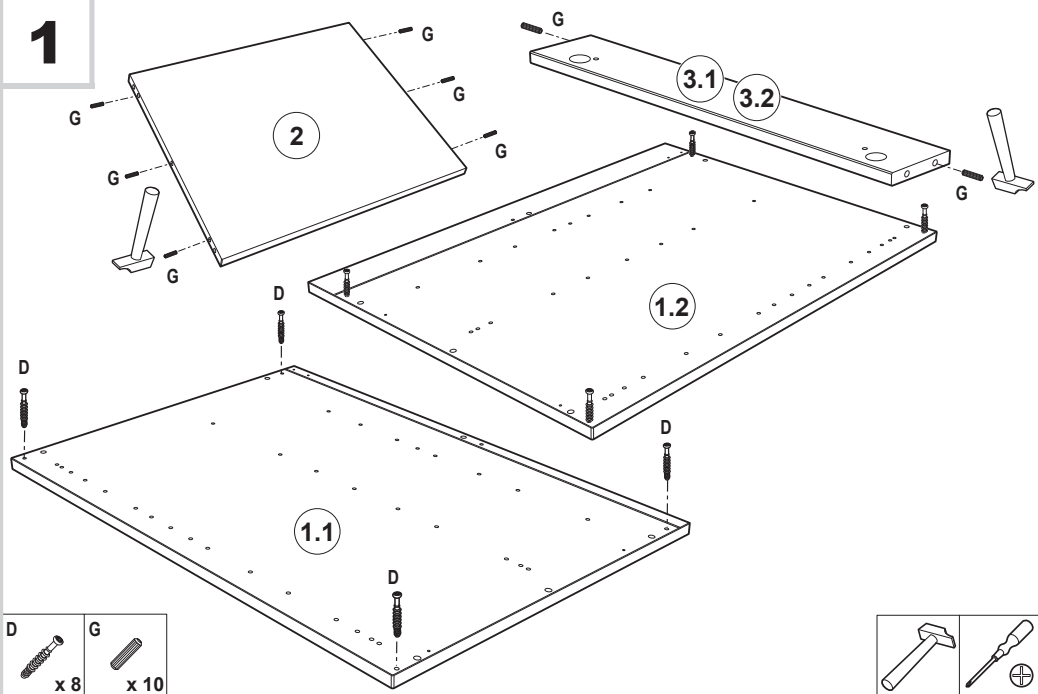


2




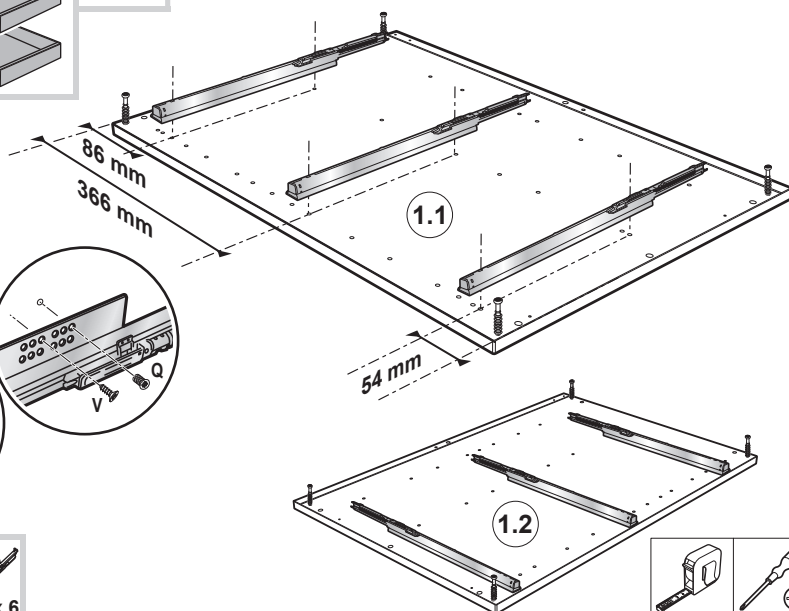


10111





2

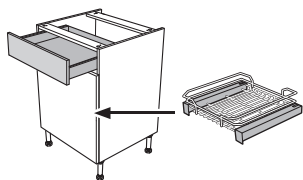

2

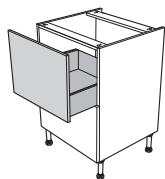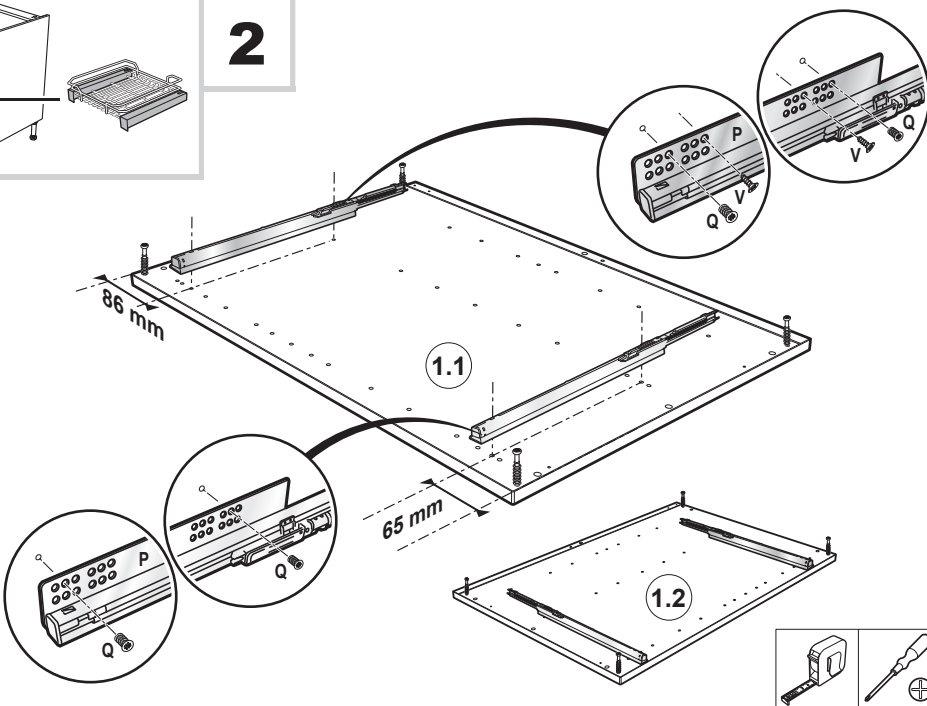

2




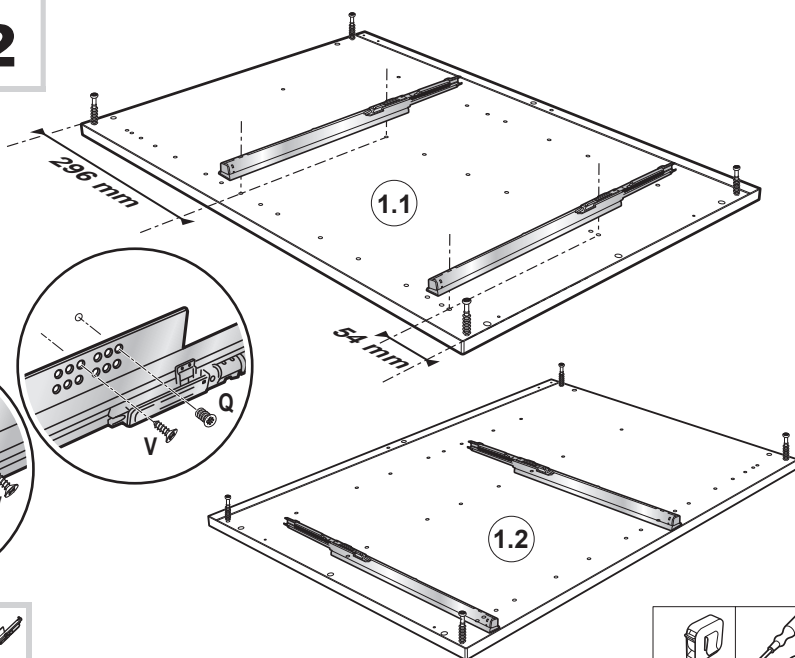
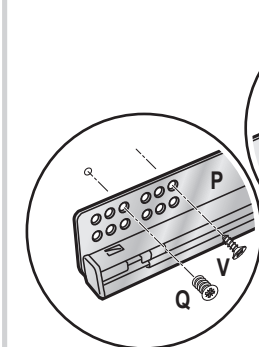


10111




3




2

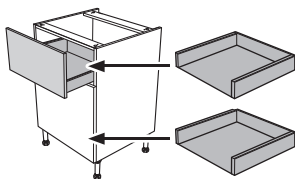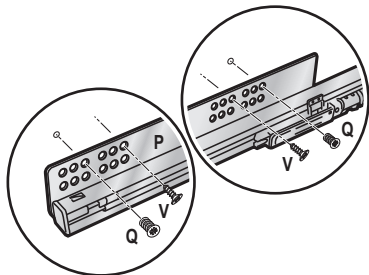
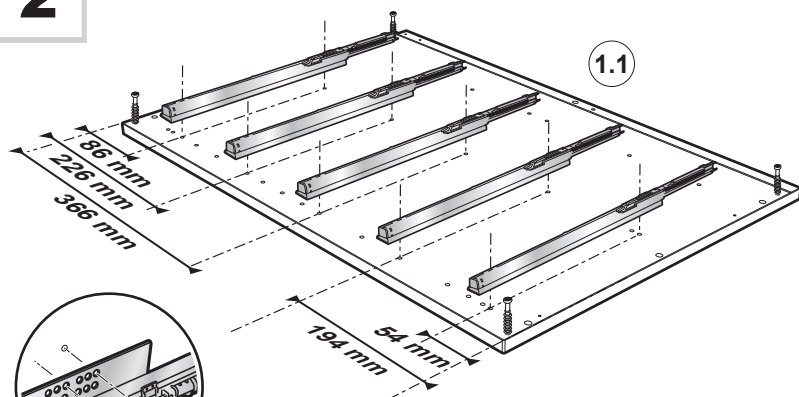


2

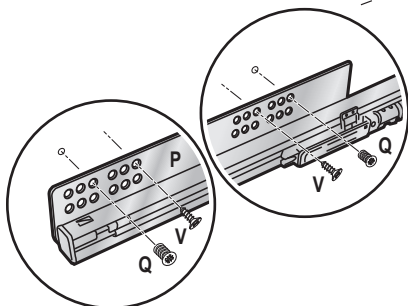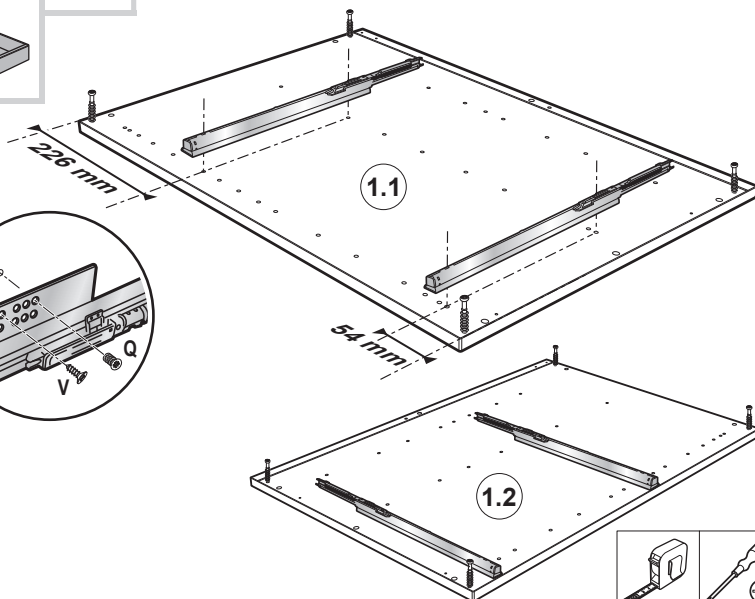


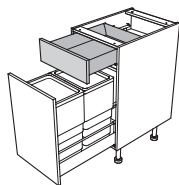




2

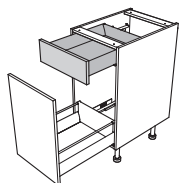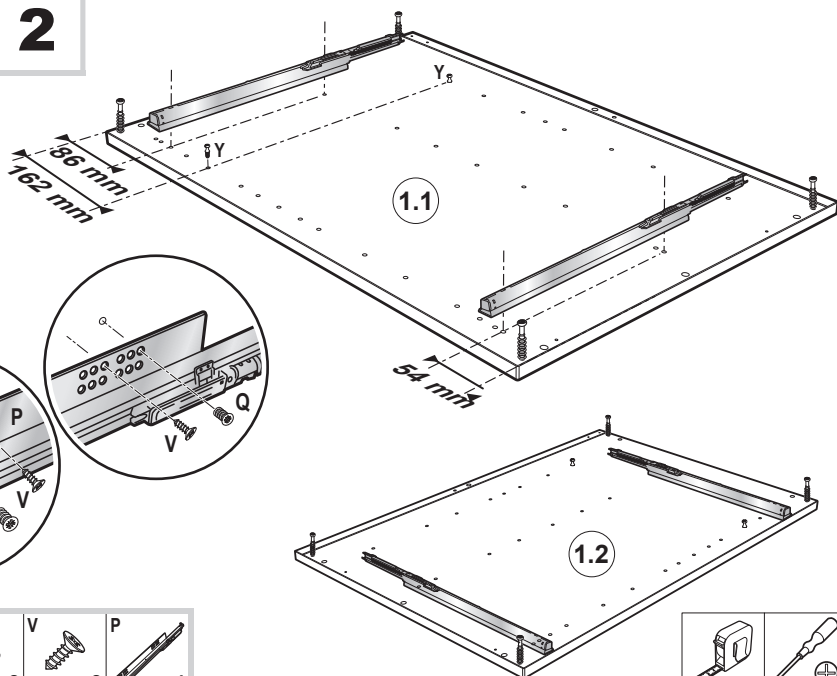

2

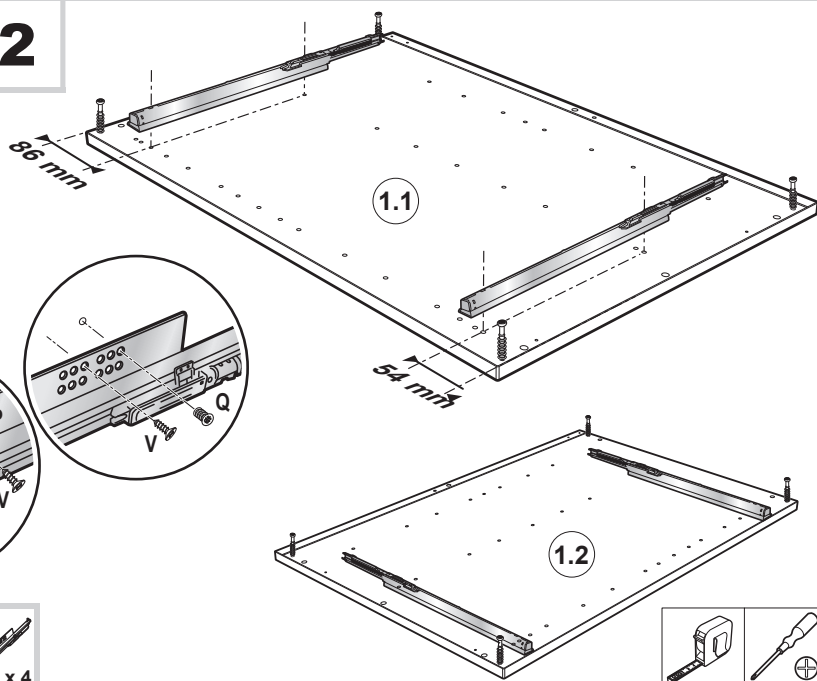




3

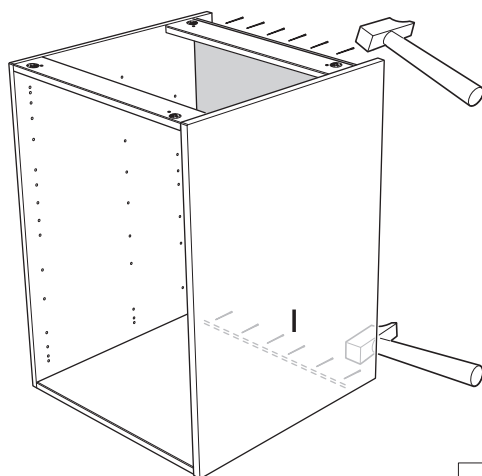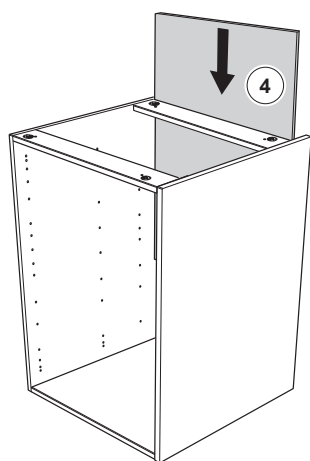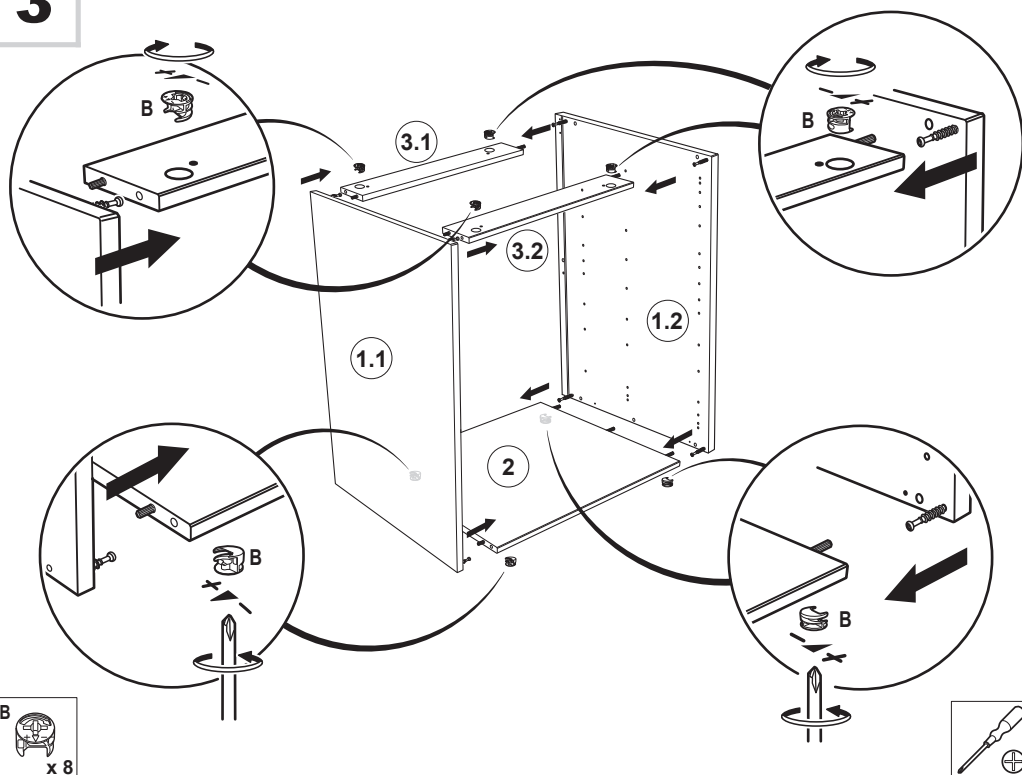





10111








6

4

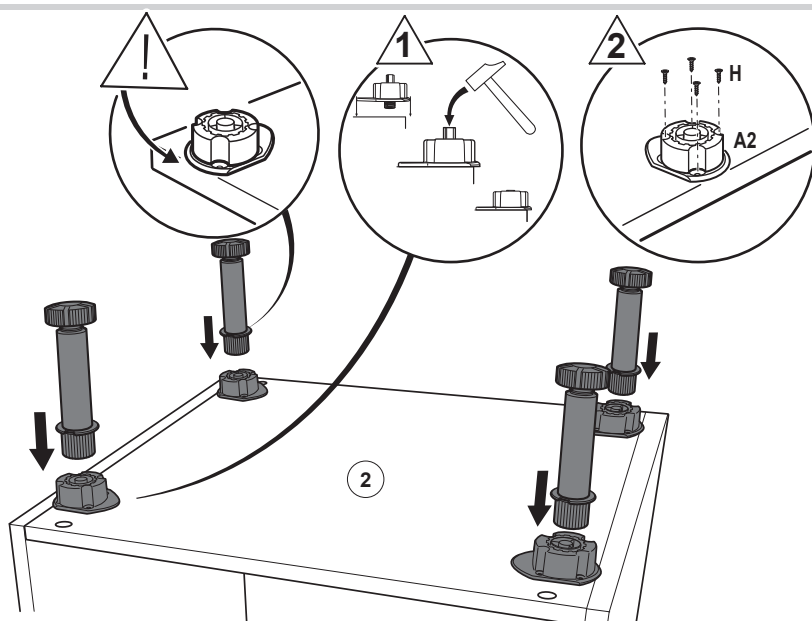


5

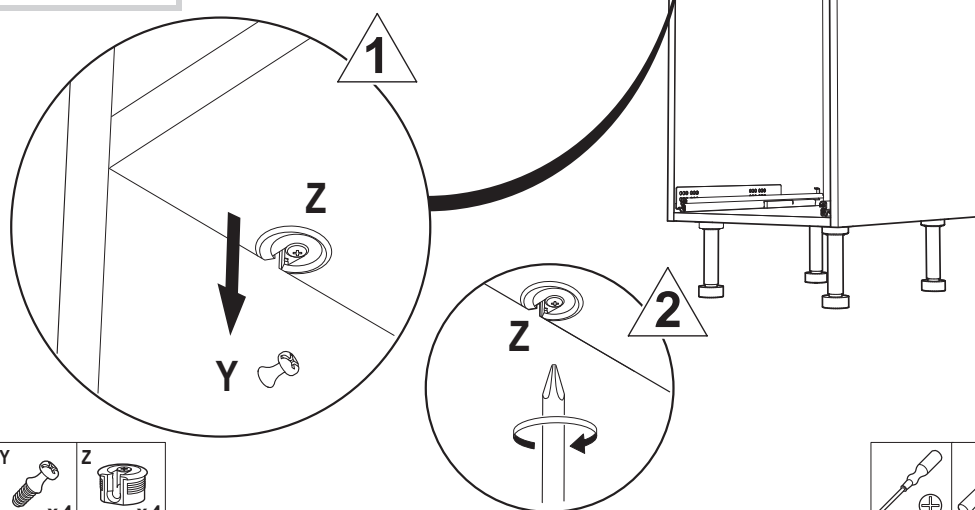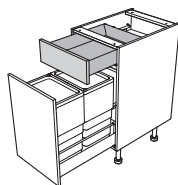


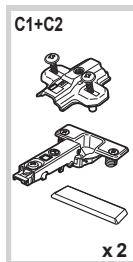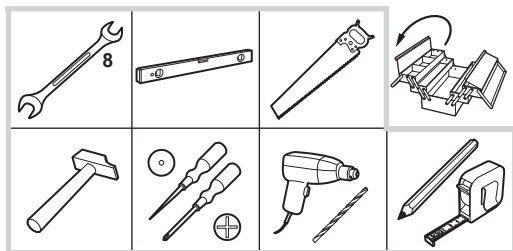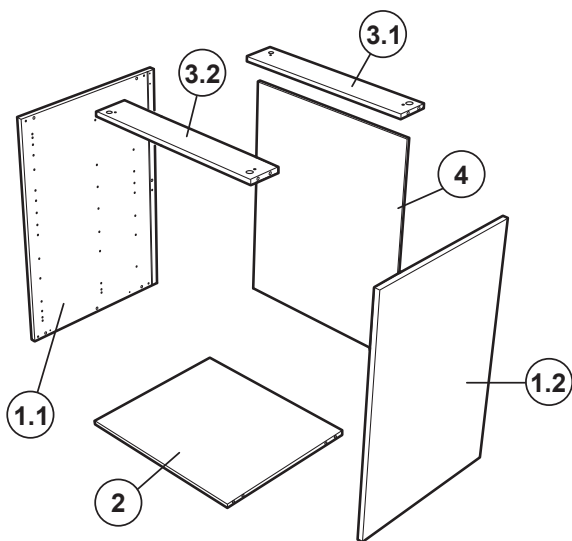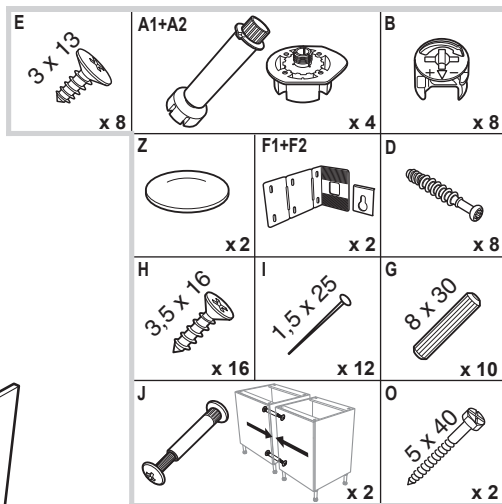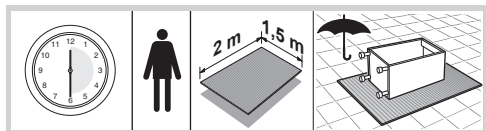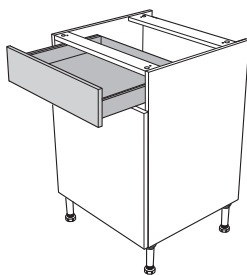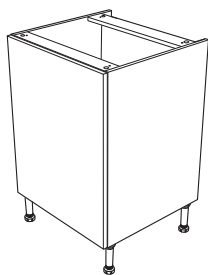

1

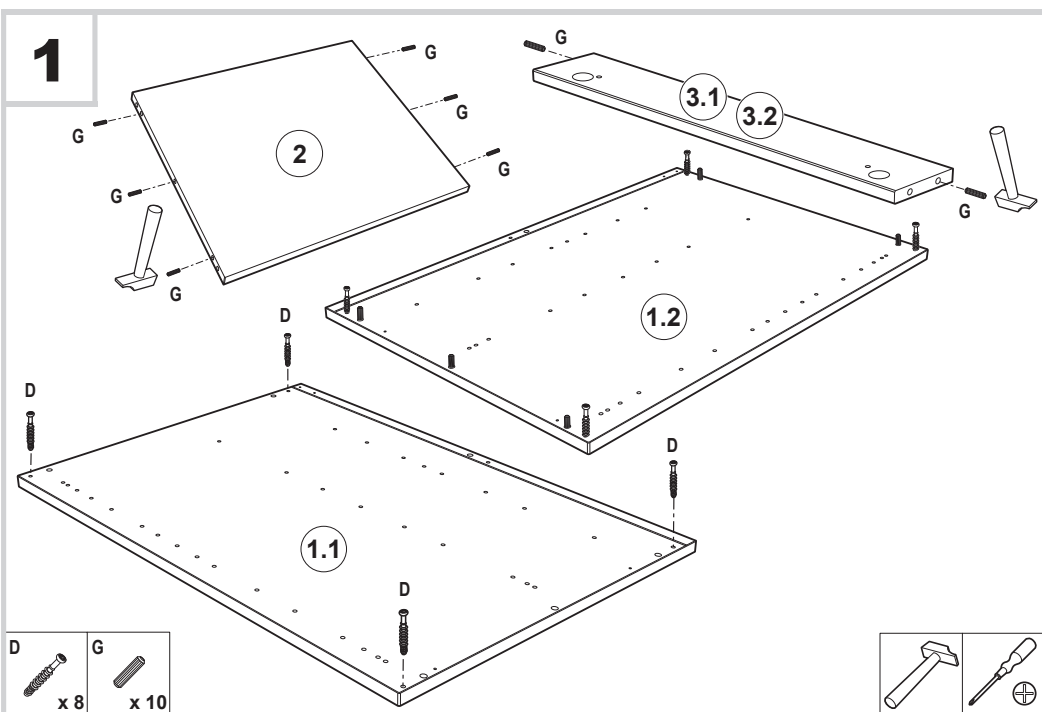


2

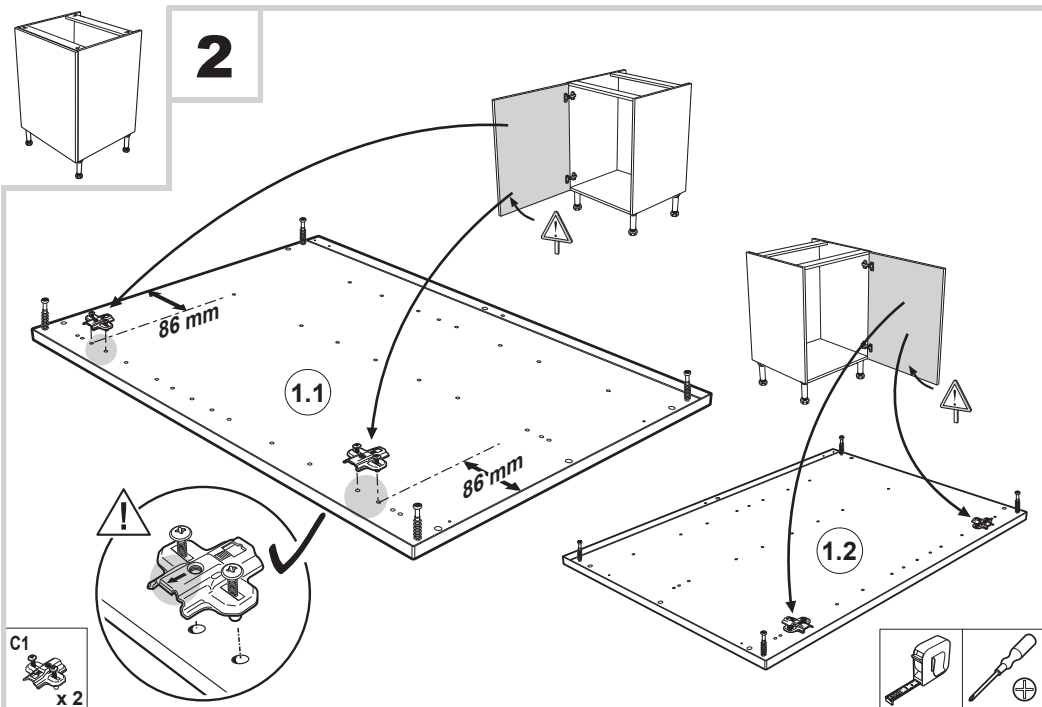


10111


9

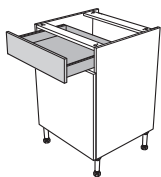

2

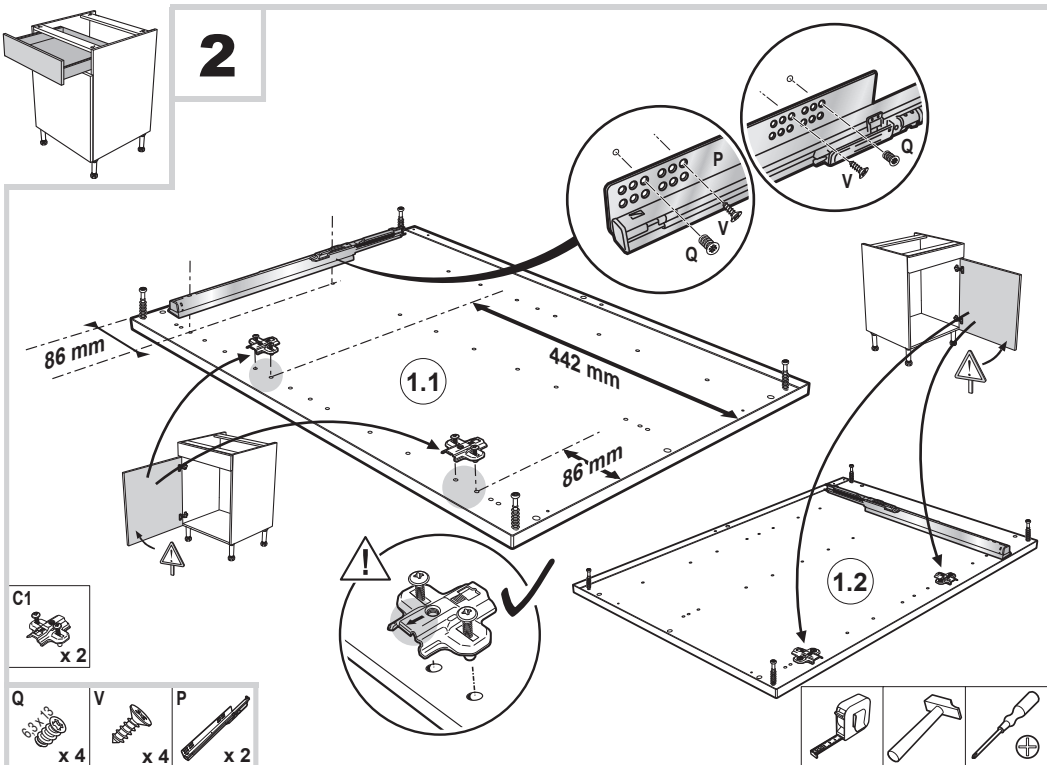


3

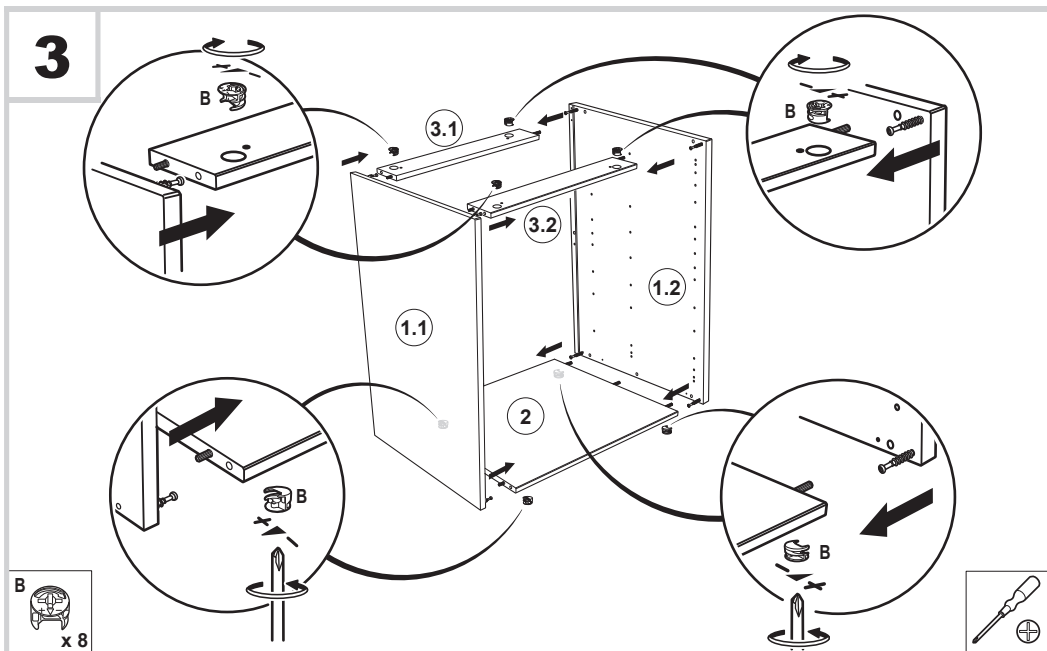


10111

10


4

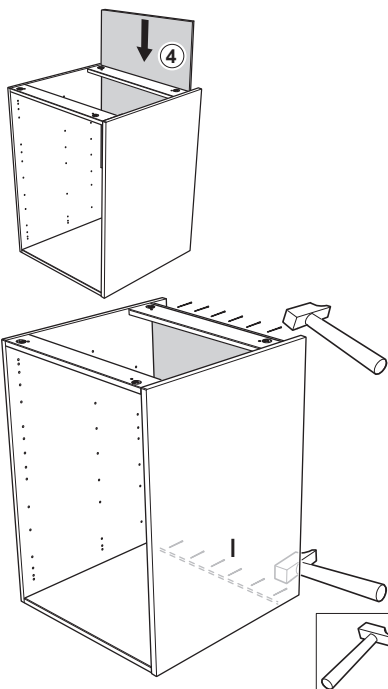









5

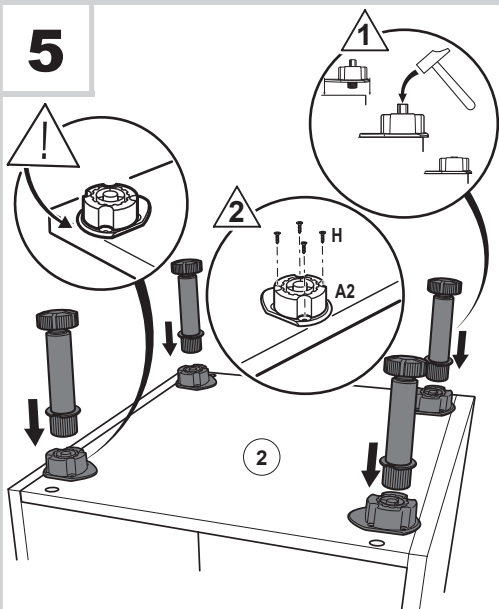

6

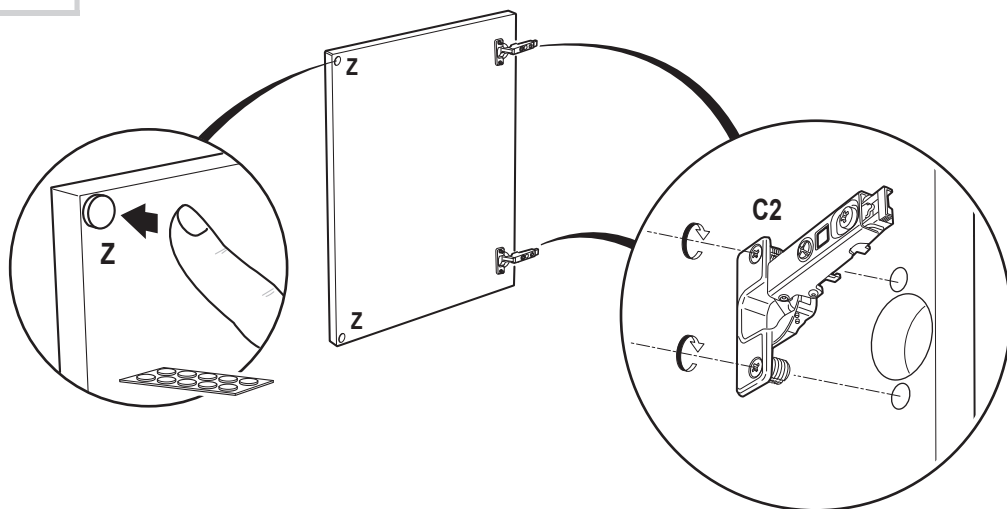

7

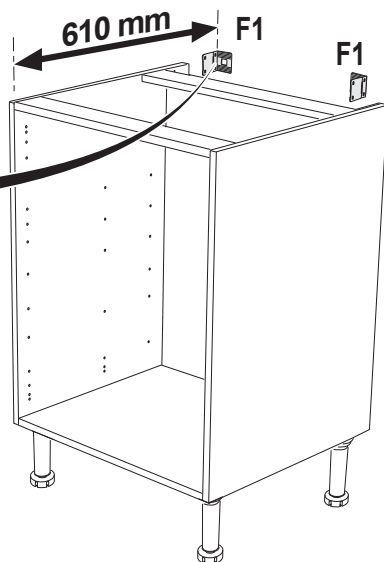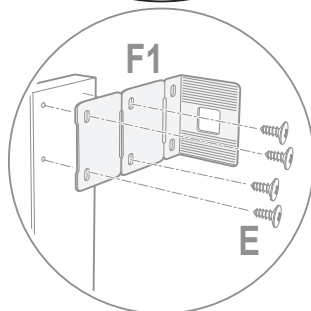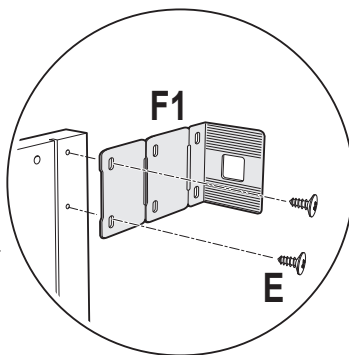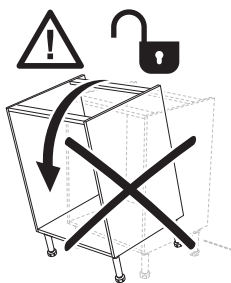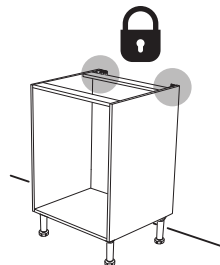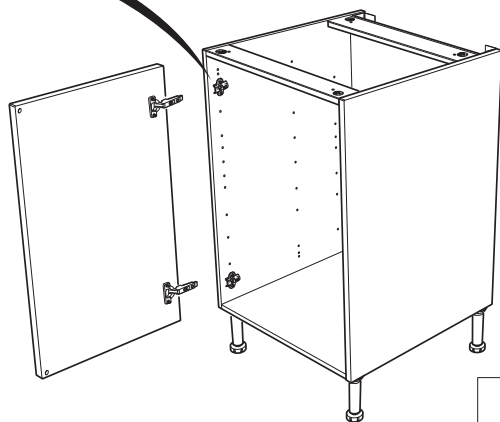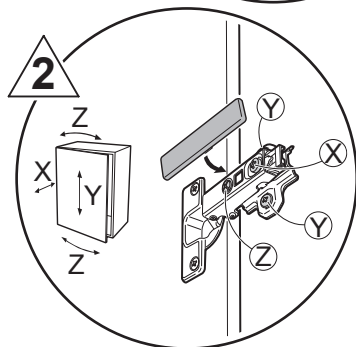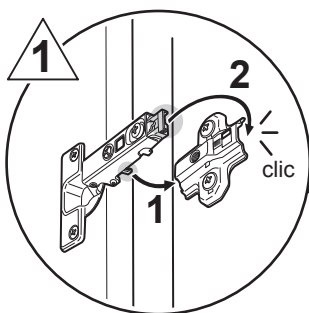

F1+F2
x 2

E
3 x 13
x 4 / x 8

10111

12

